

# VANTAGE MODERN DISPLAY CASE

## UNPACKAGING INSTRUCTIONS

**Step 1:** Remove all material securing the Vantage case to the pallet. *Leave material securing the door, attached to the case; this will help in the relocation of the case.*

**Step 2:** Remove the furniture dolly from the pallet. Sit the dolly on the floor next to the pallet. Center the dolly with your Vantage case to allow for ease and unobstructed movement.

**Step 3:** Locate a mover on either side of the case. Lift up, using the top panels as a leverage point. **Do not use the front and rear of the case as leverage points as this may result in damage to the glass or door mechanism.** Once the case has been elevated, carefully maneuver the case on top of the dolly and gently rest the case securely on top.

**Step 4:** Position one hand on the rear of the case for stability while moving the case on the dolly.

**Step 5:** Once the case has arrived in its final location gently tilt the case onto one edge. While one person supports the weight of the case the other person will remove the dolly by sliding it out from under the case and propping it against a vertical surface. Be sure to only tilt the case far enough to allow for the removal of the dolly, tilting the case too far can result in a change in the center of gravity. This can cause injury to whomever is supporting the case or the case itself.

**Step 6:** Once the case is in position, be sure to level the case using the adjustable feet. Remove any material securing the door in the closed position. Plug the wiring for the LED lights into a nearby receptacle and flip the switch on top of the case to the ON position.

